

CONTENTS

Speaker Placement	1
Attaching the Rubber Feet	2
Connections	2
Removing the Front and Top Grilles	3
Care	3
Troubleshooting	3
SPECIFICATIONS	4



Two-Way Bookshelf Speaker

Your Two-Way Bookshelf Speaker is small in size, but not in sound! Its 5-inch cone woofer with patented honeycomb material between two layers of woven fiberglass provides superior rigidity for outstanding bass performance with minimal distortion. The wide-angle Lineaum[®] dipole tweeter produces crisp, detailed highs with 360° dispersion.

Your speaker's acoustic design matches the woofer and tweeter with the enclosure and damping materials to provide amazingly smooth and broad frequency response. Your speaker can handle up to 150 watts of power.

The speaker is magnetically shielded, so you can safely place it next to your television or monitor.

SPEAKER PLACEMENT


Location and position are vital to your speaker's performance. The ideal location is on a table or shelf positioned near the corner of a room. A shelf attached to a wooden wall (or some other acoustically-sound hard surface) greatly reinforces the speaker's sound quality. If possible, place the front edge of the speaker flush with the front edge of the shelf. For the best sound, avoid floor locations; floor coverings can absorb much of the sound.

We recommend that you play a familiar, wide-range recording and experiment with speaker placement until you find the location that provides the best sound.

If you are using another speaker with this one, for the best stereo sound, the distance between your speakers should be about equal to the distance from the main listening area to a point halfway between the speakers. If you must place your speakers farther apart, turn them slightly inward.

You can mount your speaker on a wall, on a ceiling or under a shelf using optional speaker brackets (not supplied) or a $\frac{3}{8}$ -inch wall-mount speaker bracket (not supplied), both available at your local RadioShack store. Follow the instructions provided with the brackets.

Note: When you use a $\frac{3}{8}$ -inch wall-mount bracket, remove the screw on the back panel of the speaker so you can thread the ball shaft. For any other type of mounting bracket, use the four mounting holes (indicated by the arrows) and leave the screw in place.

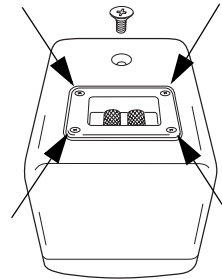

ATTACHING THE RUBBER FEET

Rubber feet are supplied with your speaker so it will not scratch your furniture. Make sure you apply the thicker feet to the speaker's front corners if you want the speaker to point up or to the back corners if you want it to point down. Remove the paper backing and press all four feet onto the bottom of the speaker.

CONNECTIONS


With the speaker placed at the desired location, measure the distance from the speaker to the amplifier. Use 18-gauge speaker wire for a distance of 50 feet or less. For a distance greater than 50 feet, use heavier 16-gauge wire.

Note: For the maximum bass response and overall best performance, connect speakers in phase — positive to positive (+ to +) and negative to negative (– to –).


Speaker wire is either color-coded, with a different color on each wire, or coded with a ridge or stripe on one wire to differentiate it from the other, making the connection easier. Your local RadioShack store carries a wide selection of speaker wire.

Follow these steps to prepare the wire and connect the speaker.

1. Separate the wire conductors for a length of about 2 inches, then remove about $\frac{1}{2}$ inch of insulation from each wire's end using a wire stripper.

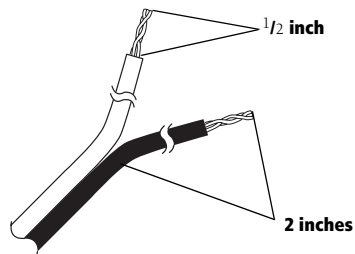

2. Turn the speaker's negative (–) terminal counterclockwise to loosen it, then insert one of the wire ends into the opening. Turn the terminal clockwise to tighten it.

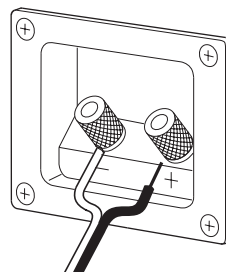

3. Turn the speaker's positive (+) terminal counterclockwise to loosen it, then insert the other wire end into the opening. Turn the terminal clockwise to tighten it.
4. Using the speaker wire's coding as a guide, connect the other end of the speaker wire to the amplifier's corresponding (+ or –) speaker terminals.

REMOVING THE FRONT AND TOP GRILLES

To remove the front or top grille, grasp the grille's edges and gently pull it away from the cabinet.

CARE

Your Two-Way Bookshelf Speaker is an example of superior design and craftsmanship. The following suggestions will help you care for your speaker so you can enjoy it for years.

Keep the speaker dry; if it gets wet, wipe it dry immediately. Use and store the speaker only in normal temperature environments. Handle the speaker carefully; do not drop it. Keep the speaker away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the speaker's internal components can cause a malfunction and might invalidate its warranty. If your speaker is not performing as it should, take it to your local RadioShack store for assistance.

Caution: You might permanently damage your speakers by cleaning them with a vacuum cleaner. Use a feather duster or a soft loose cloth instead.

TROUBLESHOOTING

This speaker has been manufactured to the specifications of RadioShack and is covered by a limited warranty from RadioShack. If your speaker is not operating as it should, take it to your local RadioShack store or call 1-800-THE-SHACK for assistance.

SPECIFICATIONS

Frequency Response	80–25,000 Hz ±10 dB
Power Handling	75 Watts (RMS)
Maximum Power	150 Watts
Impedance	8 Ohms (Nominal)
Speaker Complement	5-Inch Cone Woofer made with KEVLAR® brand fiber and 2 × 4-Inch Linnaeum Dipole Tweeter
Dimensions (HWD) w/Front Grille	10 ⁵ / ₈ × 6 ¹ / ₄ × 7 ⁷ / ₈ Inches (27 × 16 × 20 cm)
Weight.....	7 lb 8 oz (3.4 kg)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

KEVLAR® is a registered trademark of E. I. du Pont de Nemours and Company.

Limited Five-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for five (5) years from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99

**RadioShack Corporation
Fort Worth, Texas 76102**

40-5037

05A01

Printed in Malaysia